

## SETTING UP YOUR REMOTE

### ... IF YOU KNOW YOUR AIR CONDITIONER MODEL NUMBER

1. Open the battery cover, place the 2 x AAA (UM-4 or R03) batteries as the diagram shows in the battery compartment
2. Find the model from the brand code list. If there is more than one code for the brand, try them one by one, e. g. for FUJITSU, try model codes 0127 to 0137 then 0464 etc. For PANASONIC air conditioners try 0138 first and then try 0139 and so on
3. Open the cover flap to program the remote. Press the "SELECT" key and the model code on the LCD will begin flashing. Press "TIME/CODE" + or - until the correct brand code appears. Then press the "ENTER" key and the brand code will stop flashing. Point the remote at the air conditioner and press the "POWER" key. Your remote is now programmed and you can control your air conditioner from this device. If this doesn't work the first time, select the next brand code number and test again

### ... IF YOU DON'T KNOW YOUR AIR CONDITIONER MODEL NUMBER

1. Press the "SELECT" key and the model code on LCD will begin flashing. Point the remote control at the air conditioner, then press the "SELECT" key again and again. Each time a brand code is added, the remote automatically emits a signal. Press and release until the air conditioner receives a signal and the remote produces a buzzing sound. Then press the "ENTER" key
2. After turning on the air conditioner, try the other function keys. If they do not work, repeat the steps above until the correct code is found

### CLOCK SETTING OF REMOTE CONTROL

1. Press the "CLOCK" key and you will see the clock on the LCD flash
2. Press "TIME/CODE" + or - to adjust to the correct time. The time is shown in 24 hour format
3. Press the "CLOCK" key again and the clock on LCD will stop flashing. The setting is now complete. The auto-setting will time-out after 5 seconds

## HINTS AND TIPS

1. Batteries usually last between one and two years. If the remote is not being used for long periods of time, remove the batteries to avoid leakage and prevent damage to the machine. When the LCD begins to dim, change both batteries (new and old batteries should not be used together). It is not necessary to set the brand code again when the batteries are replaced; however it is necessary to set the TIME again
2. If problems arise from entering the wrong model code, you can reset the unit by placing a pen tip or other similar item into the "RESET" hole which will restore the settings to their normal status. You will be required to set the TIME again
3. The LCD will display the model code number when the model code "ENTER" key is pressed. After 5 seconds the time will be displayed
4. The remote will only work by direct line of sight. Ensure there are no barriers between the remote and the air conditioner when using the "ON/OFF" timer function
5. The manufacturer reserves the right to change the parameters and functionality of this product

## THE TECHNICAL BITS

Controllable distance: Up to 8 meters  
Battery requirements: x2 AAA (UM-4 or R03)  
Dimensions: L 127 x W 48 x D 22 mm

Weight: Approx 66 .5g (without batteries) or 87g (with batteries)